Combi®

Twin Sport

Instruction Manual

Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE. Record the following information for quick reference. Note: Illustrations are only representative and not actual.

Date Purchased: _____
Attach copy of sales receipt.

Model Number: _____ - _____
Located on the rear right leg.

Parts List

Make sure you have all the parts listed below before using your stroller. Ulf any parts are missing, call Consumer Affairs at 1-800-99-Combi.

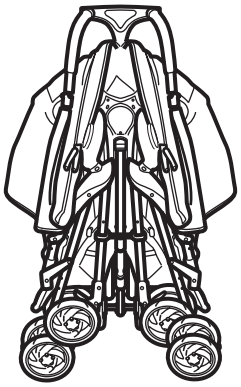

Main Body

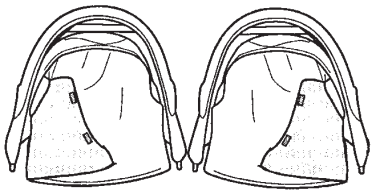

Canopies

Guardrail

Optional Accessories available for purchase separately.

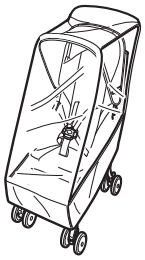

* Twin Rain Cover
Single Rain Cover shown

* Stroller Pack

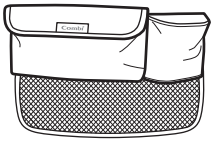

*see order form on back page

Name of Parts

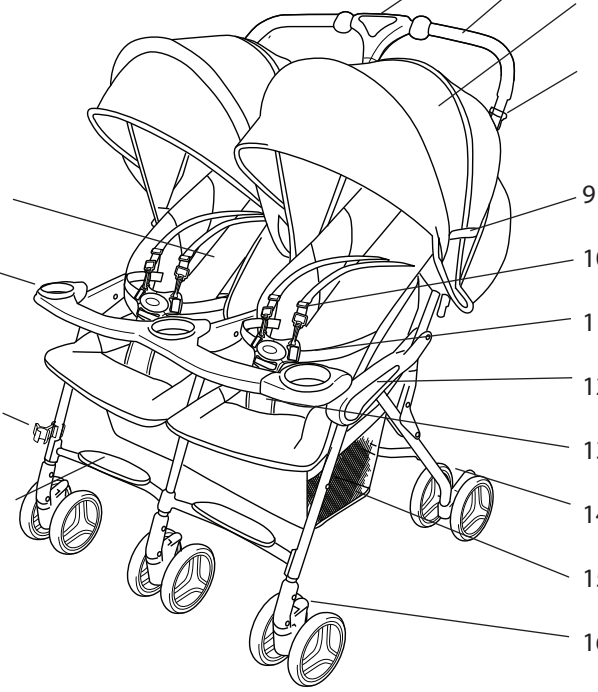

1 Seat Cushion
2 Guardrail
3 Folding Latch
4 Footrest
5 Carrying Strap
Located behind the handle.
6 Handle
7 Canopy
8 Folding Lever
9 Canopy Lever
10 5-Point Harness
11 Waist Belt
12 Armrest
13 Crotch Belt
14 Brake Lever
15 Basket
16 Swivel Lock Lever

⚠ WARNINGS:

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

In the event of damage or problems, discontinue use and contact Consumer Affairs for instructions: 1-800-992-6624.

⚠ WARNING
Avoid serious injury from falling or sliding out. ALWAYS use restraint system.

⚠ WARNING
Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.

⚠ WARNING
NEVER lift and carry stroller while occupied. The stroller may fold.

⚠ WARNING
Do not allow your child to stand in or on the stroller.

⚠ WARNING
Do not allow a child to ride or sit on areas of stroller other than seat.

⚠ WARNING
NEVER leave child unattended.

⚠ WARNING
To avoid finger entrapment or pinching, use care when folding and unfolding the stroller.
Be certain the stroller is fully erected and locked in position before allowing your child near the stroller.

⚠ WARNING
Always engage both brakes when parking the stroller.

⚠ WARNING
Do not hang items on handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.

⚠ WARNING
Excessive weight in baskets (or items placed in baskets which overflow the top or side of baskets) may cause a hazardous condition. Do not load more than 10 lbs. (4.5kg) in each of the baskets.

⚠ WARNING
Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

⚠ WARNING
Do not allow children to lean over sides of stroller. It may become unbalanced and tip over.

⚠ WARNING
Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard.

⚠ WARNING
Stroller is intended for walking speed only. DO NOT use while jogging, skating, etc.

⚠ WARNING
When Combi Shuttle infant seat is attached, ALWAYS ensure it is secure by pulling up on the handle.

⚠ WARNING
The guardrail MUST be attached to the stroller before attaching the infant carrier.

⚠ WARNING
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠ WARNING
To ensure your child's safety, please refer to the Combi Shuttle instruction manual before using it with stroller

⚠ WARNING
If unable to securely attach the Combi Shuttle to your stroller, discontinue use and contact Consumer Affairs.

⚠ WARNING
ALWAYS secure your child with the infant carriers harness before using it with the stroller.

⚠ WARNING
NEVER carry stroller by using the Combi Shuttle infant car seat handle.

⚠ WARNING
TIPPING HAZARD: NEVER place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.

⚠ WARNING
Not locking the swivel wheels before folding the stroller can damage the wheels.

** Use ONLY the Combi Shuttle infant carrier with this stroller.

Observe the following weight capacities:

Basket - 10 lbs each.

Kids Tray - 3 lbs per side.

Canopy Pocket - 1 lb each.

Total Maximum weight of the children MUST not exceed 90 lbs. (40 kg), 45 lbs per seat.

All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.

©Combi USA, Inc. 2006

Opening the Stroller

1.Release folding latch by pulling it forward.

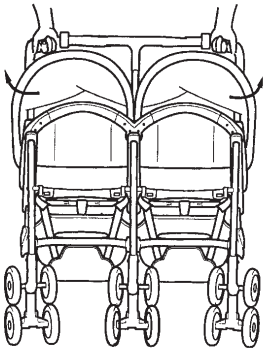

2. Grip the handle on each side and turn outward to open fully. (Holding from underneath will make this process easier.)

3.Lift up the handle and snap it away from you. It will open and automatically lock into position.

Attaching the Canopy

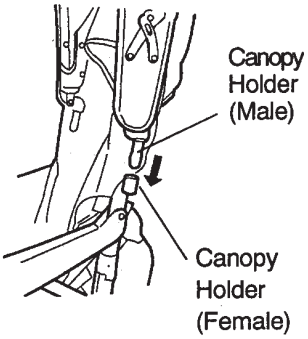

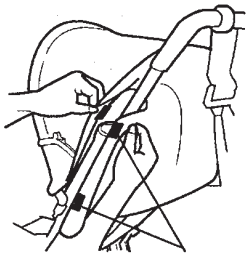

hook & loop fasteners

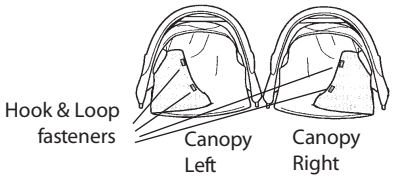

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller (by laying it down), be sure the canopy is off the ground and nothing is placed on canopy to prevent it from bending.

Attaching the Canopy

1. Confirm canopies are facing the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Connect the hook & loop fasteners located on both sides around the handle and to the back of the seats.

Removing the Canopy

Pull the hook & loop fasteners apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.

Attaching the Combi Shuttle Infant Seat

1. Recline stroller seat to the full recline position.

2. Insert Combi Shuttle into left side of stroller seat (while facing the stroller). Ensure bottom of Infant Seat rests on stroller seat.

3. Press top and bottom of infant seat down into stroller until it locks in place. Lift up gently on handle to ensure seat is secure.

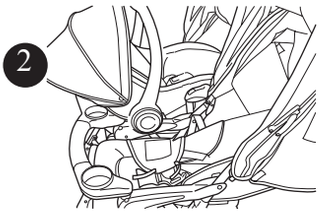

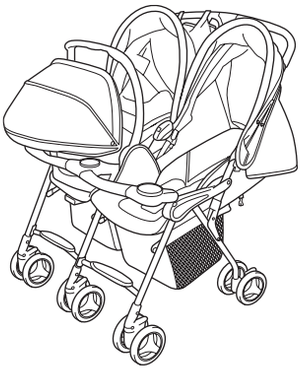

⚠ WARNING

After installation, lift car seat to verify it is securely locked onto the stroller.

Infant car seat MUST be attached to the stroller in the rear facing position only.

Removing Infant Seat

1. Pull red release lever on Combi Shuttle, while lifting up to release from stroller.

Using the Swivel Wheels

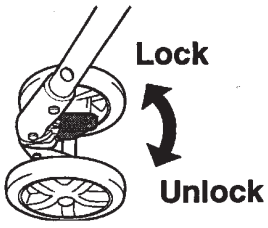

To lock swivels, make sure the lock lever is behind the stroller frame; then lift all lock levers up.

To unlock swivels, push all swivel lock levers down.

Swivel lever MUST be locked before folding and storing to avoid damage.

Using the Brakes

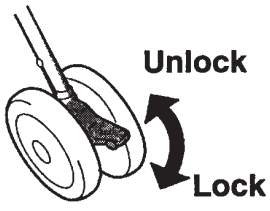

CAUTION
Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push all brake levers down. Brake levers are located on the back wheels only.

To unlock brakes, lift all brake levers up.

Adjusting the Reclining Backrest

1. To place the backrest in the upright postion, press and hold down the button on the recline mechanism and pull the strap tight while pushing the recline mechanism toward the seat back.

2. To achieve a full recline, press and hold down the button on the recline mechanism and pull downward.

CAUTION
Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

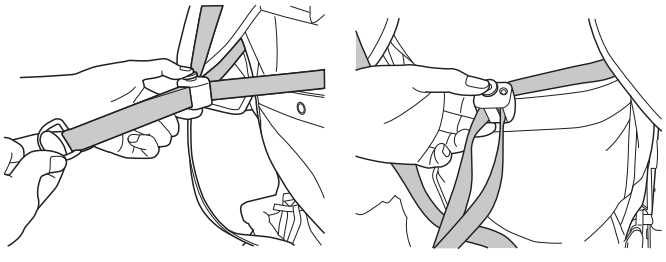

Using the Guardrail

To remove individual sides of the guardrail:

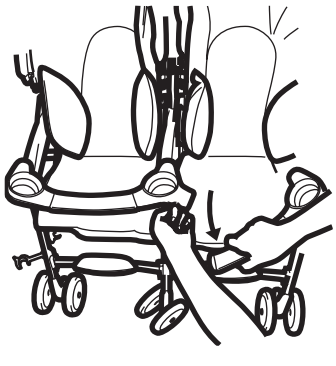

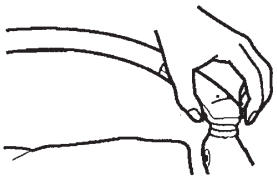

1. Press release button on the undersideofthe centersectionof theguardrailand pull out.

Note:
To rotate either side of the guardrail to permit easy access, release center button and swing the guardrail out.

2. Squeeze the buttons on the outside of the stroller and lift up to remove one side of the guard-rail.

To remove the complete guardrail:

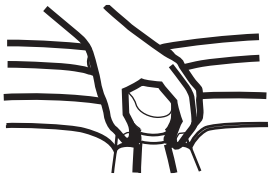

1. Squeeze both buttons on the undersideofthe middle section and lift up.

2. Squeeze the buttons on the both outside sections of the stroller and lift uptocompletely remove the guardrail.

Using the Harness

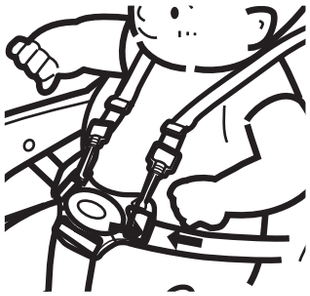

Unbuckling the Harness

1. Press levers down on right and left harness hooks to detach from buckle tongues.
2. Press buckle button down (with Combi logo) and detach buckle tongues from buckle.

⚠ WARNING

Avoid serious injury from falling or sliding out. Always use the 5-point harness.

Buckling the Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into buckle.
3. Lift buckle with tongues inserted and attach right and left hook to holes in buckle tongue
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

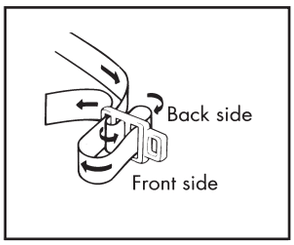

Harness Height Adjustment

1. Unhook the shoulder straps from the center buckle as shown in figure a.
2. Pull the back seat cushion forward and pull the shoulder straps through the seat cushion as shown in figure b.
3. To raise the height, thread both shoulder straps through the upper two loops as shown in figure c. To lower the height, thread the shoulder straps through the lower two loops.
4. Thread the shoulder straps through the appropriate slot of the seat cushion depending on which height the straps are set at as shown in figure d.

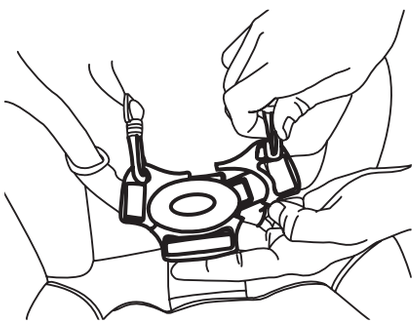

figure a

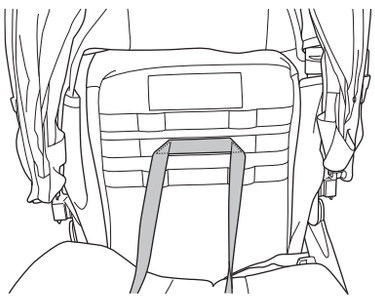

figure b

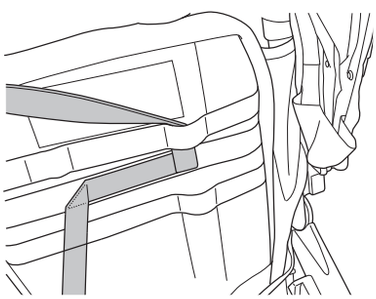

figure c

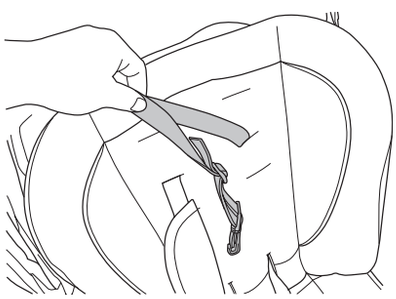

figure d

Folding the Stroller

1. Remove all items from the basket.
2. Lock all front swivel wheels.
3. Make sure seat backs are in the upright position.
4. Fold both canopies by lifting up on the canopy levers.
5. Remove your player from the back pocket of the canopy.

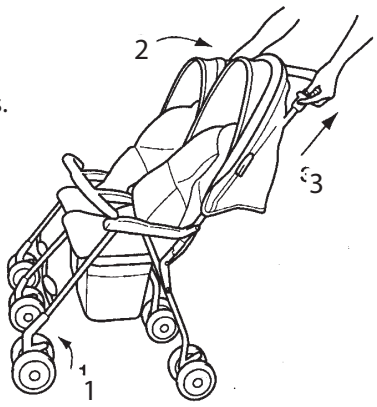

6. While lifting up the folding levers on both sides of the handle, tilt the stroller back until it folds together.

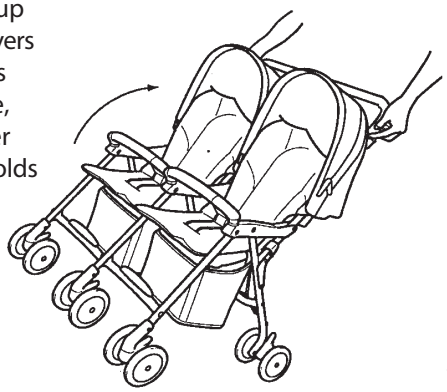

7. Fold together by bringing the sides of the handle together until the canopies face each other in the middle.

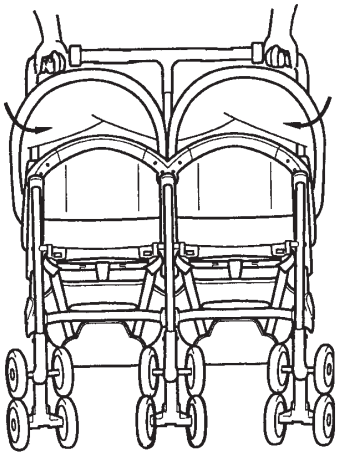

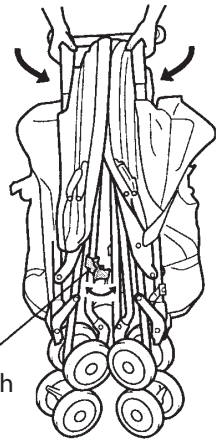

8. Lock the folding latch to hold the stroller together.

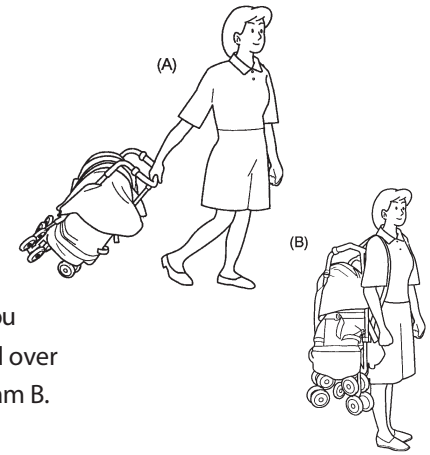

The stroller can be pulled behind you as shown in diagram A or carried over your shoulder as shown in diagram B.

Using the Safety Cover (Boot)

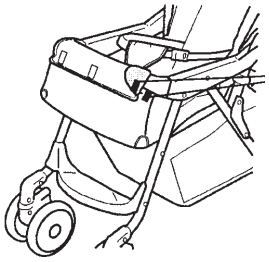

Hook & Loop fasteners

! WARNING: Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.

CAUTION
Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached.

Installing the Safety Cover (Boot)

1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the hook & loop fasteners.

Removing/Attaching the Seat Cushion

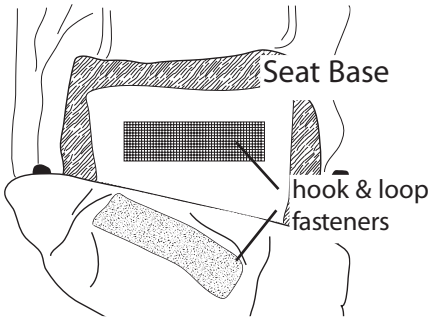

CAUTION
If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

Removing

1. Press levers down on right and left harness hooks to detach hooks from buckle tongues.
2. Press buckle button down (with Combi logo) and detach buckle tongues from buckle.
3. Remove shoulder pads from harness by pulling over harness hooks.
4. Pull top of seat pad forward to detach hook & loop fastener.
5. Pull all the harness straps through the top and side slots in cover.
6. Unzip zipper at the base of the seat cover.
7. Pull bottom of seat pad upward to detach hook & loop fastener

Attaching

1. Attach hook & loop fastener at the bottom of the seat pad to hook & loop fastener on the stroller base.
2. Pull top of seat pad forward; the seat pad can rest on the front guard rail.
3. Insert buckle strap into slot at the bottom back of the seat pad.
4. Locate zipper on the back of the seat pad and locate the zipper in the seat bite of the stroller. (The boot also has a zipper; do not use the boot zipper to attach the cover)
5. Insert harness straps with hooks and harness straps with buckle tongues thru slots on back of seat pad.
6. Attach hook & loop fastener on top of seat pad to stroller.

Zip seat pad to stroller.

Removing & Attaching the Front Swivel Wheels

Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

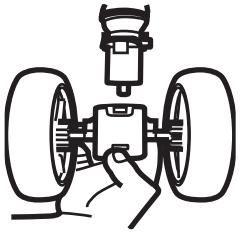

Removing the Swivel Wheels
Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

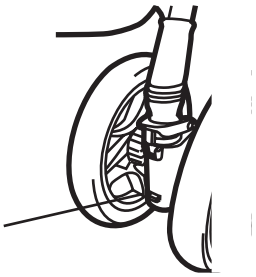

Using the Basket

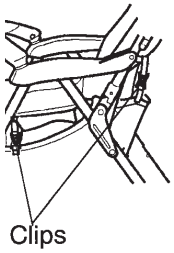

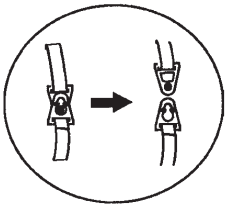

CAUTION

Do not place more than 10 lbs. in either basket. Remove all items from the basket before folding the stroller.

Removing

Unfasten clips on front and side of basket.

Attaching

Reverse the procedures for removing.

Routine Maintenance

Store in a cool and dry area, especially in summer. To avoid damaging stroller, NEVER place items on top of stroller during storage.

Seat Cushion:
The seat cushion is machine washable. Set to gentle cycle using cold water and a mild detergent. Do not use bleach. Lay seat cushion flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

Canopy, Waist Belt, Fixed Seat Base and Basket:
Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent and apply directly to the dirty area. Wipe out the detergent.

Stroller Frame (Main Body)
Briskly wipe off any mud and dirt. Wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. If fabric is not dryed completely, mold or mildew could occur.
Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

Wheel Assemblies:
After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button and wiping off mud and dirt. Do not use soap and water to wash wheels. Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add a silicone* to the wheel assemblies in small amounts.
NEVER use lubircants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

Trouble Shooting

Stroller will not fold:
- Ensure waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.

Difficult to steer or Stroller pulls to one side:
- NEVER hang items from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and silicone to wheels, if necessary.

Difficult to get up curbs:
- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

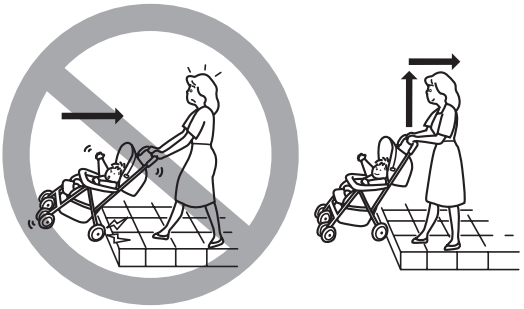

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.

2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.

b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.

c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Combi®

Twin Sport

Instruction Manual

If you would like to place an order for replacement parts, please fill out the form below and return it to the following address:

Combi USA, Inc.
Attn: Consumer Affairs Department
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or Fax this completed form to
803-548-3663

IMPORTANT : We must have this information to process your order:

Model Number: _____ - _____ Color & Pattern of Fabric : _____
Located on the rear right leg.

Parts List for the Twin Sport

	Price	Quantity	Total
1. Canopy	30.00		
2. Seat Cushion (Right side when facing the front of stroller)	40.00		
3. Seat Cushion (Left side when facing the front of stroller)	40.00		
4. Guardrail (Right side when facing the front of stroller)	15.00		
5. Guardrail (Left side when facing the front of stroller)	15.00		
6. Basket	20.00		
7. Carrying Strap	12.00		
8. Rain Cover	19.99		
9. Folding Latch	5.00		
10. Wheel Assembly	10.00 / each		
11. Stroller Pack	12.00		
	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (6%) (SC residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll free at 1-800-992-6624.

Shipping and Handling Fees: Add $8.00 for orders $34.99 and under. Add $13.00 for orders $35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Combi USA reserves the right to change pricing at any time.

Ship To:

_____
Customer Name

_____
Street Address

_____
Street Address

_____
City, State, Zip

_____
Telephone Number

Charge to my credit card:

☐ VISA ☐ MASTERCARD
☐ DISCOVER

_____
Card Number

Expiration Date _____ - _____ - _____

_____
Cardholder's Signature

☐ Check enclosed

Rev.1 / 082208